

# *Eagle*•Glory

## USER MANUAL



- (5) Maximum of 15 private messages can be locked
- (6) Erase all messages simultaneously
- (7) Display clock, calendar back light
- (8) Three individual alarm functions

## 5. Function Setup

### 5.1 Turning off the pager

Display after press the Function Key under the Date/Time display mode.



Press Selection Key until the display is as follows:

 


“PAGER OFF?” will be displayed to remind the user again after the Function key is pressed. The pager will be switched off and no display will be shown on the screen if the Function key is pressed again.




### 5.2 Turning on the pager

Pressing the Message Key in the “switch off” situation will turn on the pager. Date and time will be displayed on the screen.



## 6. SETTING ALERT

 “SET ALERT” will be displayed after the Function Key is pressed in Date/Time mode. Press the Function Key again to display the following:




Press the Selection Key to move the cursor that indicates the chosen section.

Press the Function key to confirm this selection of the cursor. The display will return to Date/Time mode.

Press the Message Key to cancel the selection of the cursor. The display again return to Date/Time mode .

## 7. SETTING DATE AND TIME

 “SET ALERT” will be displayed after the Function Key is pressed in Date/Time mode. Press the Selection Key “SET TIME” will be displayed. Then press the Function Key again, and the following will be displayed:




Press the Function Key to add numbers; Press the Selection Key to move the cursor; Press the

Message Key to confirm and return to Date/Time mode.

## 8. SETTING THE ALARM

 “SET ALERT” will be displayed when the Function Key is pressed in Date/Time mode. Keep pressing the Selection Key until “SET ALARM” is displayed. Press the Function Key again to confirm and enter the alarm clock setting mode shown below:



Press the Selection Key to move the cursor and press the Function Key to add or switch “ON/OFF”, “AM/PM”. “1” indicates the first alarm clock. When the cursor flashes on it, you can press the Function Key to add another two alarms clock and set them respectively, then press the Message Key to confirm your setting and return to the previous mode.

## 9. SETTING CONTRAST LEVEL

“SET ALERT” will be displayed after pressing the Function key in Date/Time mode. Keep pressing the Selection key until “SET CONTRAST” is displayed, then press the Function key to confirm and enter the Contrast Level Set mode shown below:



Pressing the Selection key will reduce the contrast, pressing the Function key will increase the contrast, and pressing the Message key will confirm your settings and return to the previous mode.

## 10. SETTING THE “VIEW MESSAGE” MODE

“SET ALERT” will be displayed after the Function Key is pressed in Date/Time mode. Press the Selection Key until “READ MODE” is displayed, then press the Function Key to confirm and enter setup mode with the display “PAGE-BY-PAGE”. Press the Selection Key to select “SLOW?”, “MEDIUM?” or “FAST?”, each of which indicate different speed of automatic message viewing. Press the Function Key to confirm and return to previous mode.



## 11. INPUT GREETING MESSAGE

“SET ALERT” will be displayed when the Function Key is pressed in Date/Time mode. Press the Selection Key until “INPUT GREETING” is displayed, then press the Function Key to confirm and enter

setup mode. If a greeting message already exists, it will be displayed, and the cursor will be placed at the beginning. If no greeting message already exists, nothing will be displayed and the cursor will also be at the beginning. Press the Function Key to input letters. Press the Selection Key to move the cursor to the right. Press the Message Key to move the cursor to the left. When the cursor moves out of the right border, the message will be saved and the display return to the previous mode. When the cursor moves out of the left border, present input will be cancelled.



## 12. DELETING ALL MESSAGES

“SET ALERT” will be displayed when the Function Key is pressed in Date/Time mode. If there are messages, press the Selection Key until “DELETE MESSAGES” is displayed. Press the Function Key, the warning “DELETE?” will be displayed, then press the Function Key again to confirm and delete all messages. (Locked and unread private messages will not be deleted.)

## 13. VIEWING MESSAGES

When a private message is received, the alert will start (no alert under quiet mode), and the first page will be displayed on the screen. It will return to Date/Time mode if no key is pressed within 8 seconds. If it's an unread message, the icon [✉] will be shown at the down right corner as shown below:



## 14. CONTINUED MESSAGE

When the message received is on more than one page, the continued message icon is shown at the down right corner. Pressing any key will move to the next page.

## 15. LOCKING A MESSAGE

In Viewing Message mode, press the Function Key . “LOCK?” will be displayed. Then press the Function Key again to lock the present message. Pressing the Message Key before pressing the locking confirmation key will return to Date/Time mode and will not lock the present message.

## 16. UNLOCKING A MESSAGE


When viewing a locked message, press the Function Key . “UNLOCK ?” will be displayed. Press the Function Key again to unlock this message. Pressing the Message Key before pressing the confirmation key will return to Date/Time mode, and the message will not be released.

## 17. DELETING SPECIFIC MESSAGES


In Viewing Message mode, press the Function Key . “LOCK?” will be displayed. Press the Selection Key

once and the pager will display “DELETE?”. Press the Function Key to confirm the operation and return to Date/Time mode. Pressing the Message Key before pressing the confirmation key will cancel the operation and return to Date/Time mode.

#### **18. DUPLICATE MESSAGES**

When the same message is received more than once, the duplication icon  will be displayed in the icon group.


#### **19. LOW VOLTAGE INDICATOR**

When the battery voltage is low, the low voltage icon  will be displayed in the center of the icon group. It disappears automatically when a new battery is inserted.

#### **20. BACKLIGHT**

Pressing any key for 2 seconds in any operation mode will turn on the back light, and pressing any key for another 2 seconds will turn it off. When it's already on, it will be turned off with the LCD if no key is pressed within 8 seconds.

#### **21. SERVICE RANGE INDUCATION**

When the pager is out of its service range, the antenna icon  is disappear in the icon group.

#### **22. PUBLIC MESSAGES**

In Date/Time mode, press the Selection Key. “ MAIL DROP ” will be displayed. You can press the Message Key to view public messages.



United Communications Corporation

888-763-7550

[www.uccwireless.com](http://www.uccwireless.com)