








 
 

Ranger Flex

PG-2091F Manual Capcode Programming Instruction

Note: While the pager is in “OFF” mode, press Read / replace key  to turn on the pager. Before alert or vibration stops, press setting / selection key  and function key  simultaneously for two seconds. Press function key  to input the preset password

 

 


It will come up pass 0000. Default password is 0001.

and press setting / selection key  to enter manual capcode programming function. You may press Read / replace key  until the requested function displays, then press setting / selection key  to enable and enter this function. Press setting / selection key  to move the address and press function key  to adjust the value. Press Read / replace key  to exit from the function and confirm the adjustment.



4.1 Address Code setting



- ◆ Totally there are 4 groups of address code settings: **AbCd**.
- ◆ Press function key  to select **E** to enable the address code setting function and select **N** to disable the address code setting function.
- ◆ Press setting / selection key  to move to the address needed changing, then press function key  to adjust to your needed address code value.

4.2 Collapse setting



- ◆ Press setting / selection key  to move to the address needed changing, then press function key  to adjust to your needed Collapse value.

4.3 Phase setting



- ◆ Press function key  to adjust PHASE And the order is: [**Any-A-b-C-d-Any**].

4.4 Frequency setting



The LCD display shows the text 'F.F 2840 125B' in a seven-segment font.

- ◆ Press setting / selection key ▲ to move to the address needed changing, then press function key ● to adjust to your needed frequency value. **B. NOTE-Selecting letter A will make pager inoperable under normal circumstances.**

4.5 Format setting



The LCD display shows the text 'FORM: _U -][' in a seven-segment font.

- ◆ Press function key ● to select receiving format as Taiwan: _U -][or Mainland: Ab CdE.

4.6 Password changing



The LCD display shows the text 'SET: PASSWORD' in a seven-segment font.

- ◆ Press setting / selection key ▲ to display:



The LCD display shows the text 'PASS 00000' in a seven-segment font.

- ◆ Press setting / selection key ▲ to move to the address needed changing then press function key ● to adjust to your needed Password value.

4.7 Decoder setting



The LCD display shows the text 'SET: decoder' in a seven-segment font.

- ◆ Press setting / selection key ▲ to display:



The LCD display shows the text 'CODE 00000' in a seven-segment font.

- ◆ Input correct code to display:



- ◆ Press setting / selection key ▲ to change Decoder Packer.

4.8 Capcode programming



- ◆ Press function key ● to select capcode programming or not.



- ◆ Press setting / selection key ▲ 3 times to finish the manual capcode programming.

