

# ***Eagle•Spirit***

2569P

Pocsag 4 line Alphanumeric pager

**USER MANUAL**

## Contents

### 1. Introduction

 
- 1.1 Control buttons
- 1.2 Turning Your Pager On
- 1.2 Turning Your Pager Off

### 2. Getting Started

- 2.1 Using the Function Menu
  - 2.2 Message-Status Screen
  - 2.3 Receiving/Reading Personal Messages
    - 2.3.1 Reading an Incoming Message
    - 2.3.2 Reading a Stored Message
    - 2.3.3 Message Reading Features
    - 2.3.4 Message Preview
  - 2.4 Display Zoom
  - 2.5 Setting the Time and Date
  - 2.6 Setting Message Alert
    - 2.6.1 Setting the Audible Alert
    - 2.6.2 Setting the Alert Pattern
    - 2.6.3 Setting the Silent (vibrate) Alert
  - 2.7 Deleting Message
    - 2.7.1 Delete a Single Message
    - 2.7.2 Delete all Messages
  - 2.8 Pager Alarm
    - 2.8.1 Set a One-Time Alarm
    - 2.8.2 Set the Alarm to Alert Daily
  - 2.9. Private Time
    - 2.9.1 Set Private Time
    - 2.9.2 Disable Private Time
- ### 3. Maildrop/Information Service Option
- 3.1 Maildrop Alert
  - 3.2 Turning Individual Maildrop Alerts ON and OFF
  - 3.3 Selecting a Maildrop Alert
- ### 4 Duplicate Message
- ### 5. Backlight
- ### 6. Low Battery Indication

## 1. Introduction

### 1.1 Control Buttons

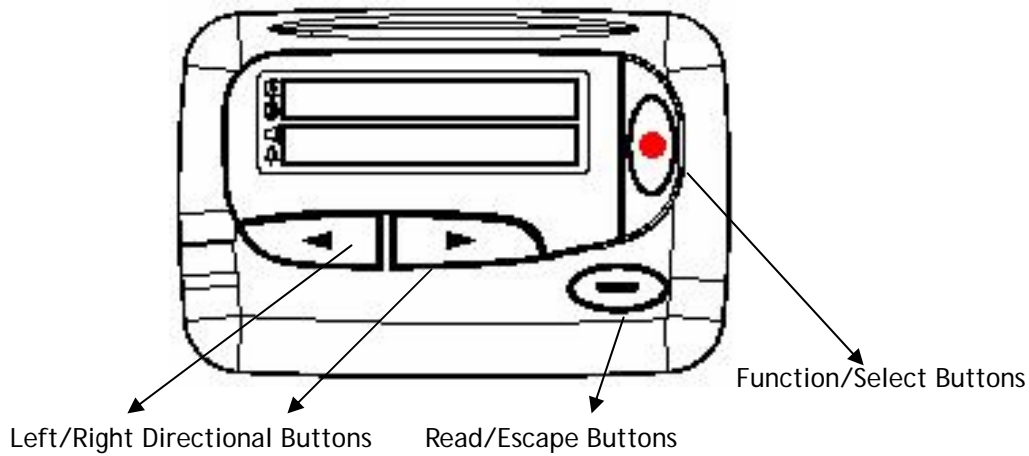

◀ / ▶ Left/Right Directional Buttons

Used to navigate through the Function menu and through your messages

● Function/Select Buttons

Used to display the Function menu, to select a pager function and to activate your selection and turn 'on' your pager.

■ Read/Escapt Button

Read messages and Exit setting pager and confirm it.

### 1.2 Pager Symbol

⚙ Power On

📶 Out of range

🔊 Beep alert

🚨 Alarm On

#### Message Status Symbols

📧 Maildrop Alert Enabled

📧 Maildrop Icon

▲ Personal Message

🚨 Alarmed Message

#### Function Menu Symbols

🔊 Choose Alert





 
 
 

🕒 Set Time and Alarm

🕒 Set Private Time

🔍 Set display Zoom 1

🔍 Set display Zoom 2

🔍 Set display Zoom 3

-  Set Silent Alert
-  Set Audible Alert
-  Turn Pager Off
-  Escape (to Message-status screen)
-  Delete Message
-  Delete All Messages
-  Turn Maildrop Alert On
-  Turn Maildrop Alert Off


### Other Symbols

 Message Continuation


24hr 24 Hour Time

AM AM Time

PM PM Time

 Enable Alarm

 Disable Alarm

 Private Time Enabled  
Private Time Disable


 Low battery Indicator

 1/4 Battery Indicator


 3/4 Battery Indicator

 Full Battery Indicator






### 1.3 Turning Your Pager On

Press  for 3 seconds, a start-up screen is momentarily displayed and your pager activates the currently selected alert.

**Note:** Press any button to stop the alert.

When there is no activity, the Standby screen is displayed. The Standby screen displays the power-indicator  and may display other pager status indicators.

### 1.4 Turning Your Pager Off

- (1) Press  to display the Function menu.
- (2) Press  to move the cursor to .
- (3) Press  TURN PAGER OFF? is displayed.
- (4) Press  again to turn the pager off.

Your pager is now 'off' and the screen is blank.

## 2. Getting Started

### 2.1 Using the Function Menu

The Function menu provides access to the many features of your pager through the use of symbols and prompts.

- (1) Press **▲** to display the Function menu. When the Function menu is initially displayed it flashes to indicate the location of the cursor.



*Example of Fully Displayed Function Menu*

 
- (2) Press **◀** or **▶** to move the cursor within the Function menu. As you move through the Function menu, the pager function symbols flash to indicate the present location of the cursor. To exit from the Function menu without making any changes press **■**.

**Note:** Some symbols may not display on your pager, depending upon your pager's features and whether it has messages.

## 2.2 Message-Status Screen

The Message-status screen shows the current status of your messages. For example, unread messages are indicated by a flashing **▲** symbol.

The Message-status screen also displays the time and date and any activated pager settings. The message-status screen can be accessed by pressing **◀** or **▶** from the standby screen.



*Example of the Message-Status Screen*

## 2.3 Receiving/Reading Personal Messages

Your pager can receive up to 19 personal messages. When a message is received, your pager alerts according to the current alert setting (audible, vibrate, or no message alert). A new message is indicated by a flashing **▲** symbol. When a message is selected the symbol changes to **■**.

### 2.3.1 Reading an Incoming Message

- (1) Press any button to stop the alert.
- (2) Press **■** to display your message.

A flashing **↓** in the right corner of the screen indicates the message is continued on an additional screen (s).

- (3) Press **■** to exit.

### 2.3.2 Reading a Stored Message

- (1) From the Message-status screen press **◀** or **▶** to move the cursor to the message you want to read.

(2) Press **■** to read the message.

### 2.3.3 Message Reading Features

Press **◀** or **▶** while reading a message to read the previous or next message.

**Note:** When an unread message exists, your pager gives a periodic reminder alert until all unread messages are read. A flashing **⚙** on the Standby screen indicates that you have unread messages.

### 2.3.4 Message Preview

This feature allows you to scan the first line of your messages.

(1) Press **■**.

(2) Use the **◀** or **▶** buttons to move the cursor through your messages.

**Note:** Previewing an unread message does not remove the unread message status from the message.

## 2.4 Display Zoom

When this feature is enabled, the standard 4-line display is converted to a 2-line display. The characters are enlarged vertically. Increasing message readability.

### 2.4.1 To Enable Display Zoom

(1) From the Function menu, press **◀** to move the cursor to **⌕** (zoom 2) or **⌕** (zoom 3) or **⌕** (zoom 1)

(2) Press **●**, Display zoom is now active.

All new and stored messages including notebook messages are displayed by setting format.

## 2.5 Setting the Time and Date

(1) From the Function menu, press **◀** to move the cursor to **⌚**.

 
(2) Press **●** to display the Set-time-and-alarm screen.

(3) Press **▶** to move the cursor to the hour digit.

(4) Press **●** adjust the hour.

(5) Repeat steps 3 and 4 to adjust the minutes, AM/PM/24 Hr., month, day and year.

(6) Press **■** to activate the time and date setting.






#### *Example of Set-Time Screen*


If you move the cursor past the last symbol (in the now far right), it automatically wraps around to the first symbol in the beginning of the same row (far left).

**Note:** To exit from any screen without making changes, press **■**.


 

## 2.6 Setting Message Alert


### 2.6.1 Setting the Audible Alert







- (1) From the Function menu, press  to move the cursor to .
- (2) Press .

When  is displayed on the Standby screen, your pager is in the audible alert mode.

### 2.6.2 Setting the Alert Pattern





You can set your pager to alert audible with a standard alert (1), one of seven pleasing alerts (2-8), a chirp alert () , or a chirp and vibrate alert (). You can also select no message alert ().

Your pager must be in the audible alert mode ( displayed in the Standby screen) to select an alert pattern.

- (1) From the Function menu, press  to move the cursor to .
- (2) Press  to display the chosen alert menu.
- (3) Press  or  to move the cursor to the desired alert. The pager gives a sample of each alert as you move through the selections.
- (4) Press  to activate your selection. The pager gives a sample of the alert to confirm your selection.

### 2.6.3 Setting a Silent (Vibrate) Alert








**Note:** If  is not displayed in the Standby screen, your pager is already in the silent alert mode.

- (1) From the Function menu, press  to move the cursor to .
- (2) Press  to activate the silent alert. The pager vibrates to confirm your selection. The  symbol is removed from the Standby screen.





## 2.7 Deleting Message

This feature allows you to delete unlocked and un-alarmed messages.

### 2.7.1 To Delete a Single Message

- (1) From the Message-status screen, Press  or  to select the message you want to delete.
- (2) Press .
- (3) Press  to move the cursor to .
- (4) Press , DELETE MESSAGE? is displayed..
- (5) Press  again to delete the message.


### 2.7.2 Delete All Messages

- (1) From the Function menu, Press  to move the cursor to .
- (2) Press , DELETE ALL MESSAGES? is displayed.
- (3) Press . All read messages are deleted.





Note: Notebook messages are not deleted with this feature.

 
## 2.8 Pager Alarm

Your pager has an alarm that can be set for a specific time and date, or a specific time on a daily basis.



At the selected alarm time, your pager alerts. If the alarm passes without being acknowledged,  Flashes until any button is pressed.








### 2.8.1 To Set a One-Time Alarm

- (1) From the Function menu, press  to move the cursor to .
- (2) Press . The Set-time-alarm screen is displayed.
- (1) Press . The Set-alarm screen is displayed.




 
#### *Example of Set-Alarm screen for a Specific Time and Date*

The alarm symbol shows the current alarm status. "  " is displayed if the alarm is enabled, "  " is displayed if the alarm is disabled.



- (2) Press  to move the cursor to the alarm symbol.
- (3) Press  until "  " is displayed.
- (4) Press  to move the cursor to the hour digits.
- (5) Press  adjust the hour digits.
- (6) Repeat steps 6 and 7 to adjust the minutes, AM/PM/24 hr., and date.
- (7) Press  to activate your selection. The  symbol is displayed on the Standby screen.

### 2.8.2 Set the Alarm to Alert Daily

- (1) Follow steps 1 through 8 in "To Set a One-Time Alarm" to set the alarm time.
- (2) When setting the date in step 8, press  until you see double dashes for the month, day, and year (--/--/--).



#### *Example of Set-Alarm Screen for a Daily Alert*

- (3) Press  to activate your selection. The alarm is now set to alarm every day at the specified time and  is displayed on the Standby screen.

## 2.9 Private Time

 
You can select a time period during which your pager is completely silent. Your pager still receives messages but it does not alert. The pager alerts only if an alarm expires or a priority message is received.

### 2.9.1 Set Private Time

- (1) From the Function menu, press  to move the cursor to .

(2) Press ●.

When the Private-time screen is first displayed, the cursor is at the flashing symbol on the far left, ☐ indicates private time is enabled, ■ indicates private time is disabled.



#### *Example of Set Private-Time Screen*

- (3) Press and release ● until ☐ is displayed.
- (3) Press ► to move the cursor to the hour digit.
- (4) Press ● to adjust the hour digit.
- (5) Repeat steps 4 and 5 to adjust the on and off time setting.
- (6) Press ■ to activate you selection.

The symbol ☐ is displayed in the Standby screen when private time is enabled.

 
**Note:** If the on time is equal to the off time, private time is not enabled.

### 2.9.2 Disable Private Time

- (1) Press ●.
- (2) Press ◀ to move the cursor to ☐.
- (3) Press ●.
- (4) Press and release ● until ■ is displayed.
- (5) Press ■ to disable private time.

## 3. Maildrop/Information Service Option

Your pager is capable of receiving Maildrop messages, also known as information services. Maildrop messages are received and read the same way as personal messages and the icon indicators are located on the second row of the display.




#### *Example of Maildrop Indicators*

### 3.1 Maildrop Alerts








When this option is enabled, you can set your pager to alert when maildrop messages are received.

- (1) A ☐ in maildrop message area indicates the alert is off for that maildrop. A 🎵 indicates the alert is on for that maildrop.
- (2) If the pager's incoming message alert is set to silent (vibrates), all maildrops with the alert set to on (🎵),










produce a 2-second vibration when a maildrop message is received.

- (3) If the pager's incoming message alert is set to audio, the maildrop alert can be set to either the standard alert, one of the seven pleasing alerts, a chirp alert, a chirp, silent alert, or no message alert via the Choose-alert menu. The length of the maildrop alert is 2 seconds.
- (4) If the pager's incoming message alert is set to no message alert, maildrop alerts cannot be set and all maildrop symbols are automatically displayed as .

### 3.2 Turning Individual Maildrop Alerts On and Off

- (1) From the Message-status screen, press  or  to move the cursor to the desired maildrop.
- (2) Press .
- (3) Press  to move the cursor to  alert ON or  alert OFF.
- (4) Press  to turn the maildrop alert ON or OFF.

### 3.3 Selecting a Maildrop Alert

- (1) From the Message-status screen, press  or  to move the cursor to the desired maildrop.
- (2) Press .
- (3) Press  to move the cursor to .
- (4) Press . The choose alerts menu is displayed.
- (5) Press  or  to move the cursor to the desired alert.
- (6) Press  to activate the alert. The pager gives a sample of the alert, unless no message alert is selected.

## 4. Duplicate Message



If the same message is received more than once, DUPLICATE MESSAGE is displayed at the beginning of the new message. The new duplicate message replaces the older duplicate message and contains the latest time and date stamp.

DUPLICATE MESSAGE 19: Thank you for all you do. 8:00 01/01/2005
--

## 5. Backlight

You can manually turn the backlight on or off at any time by pressing and holding any key over two seconds. The backlight automatically turns off when the pager returns to the standby screen or holding any key over two seconds.

## 6. Low Battery Indication

When the energy level of the battery is low, the battery icon will change from  to . An audio alert sounds every 4 minutes.